




High Static Pressure Radiator Fan



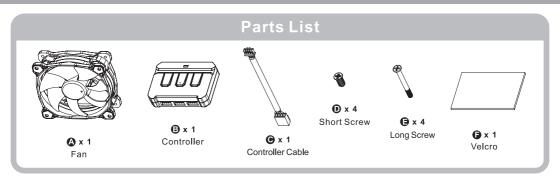

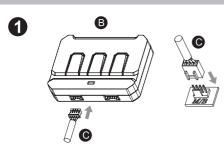


 Connect the 4pin controller cable to mainboard and Controller.



Always insert the 5pin fan cable into the primary connector on the controller (Note: There is a mark printed on the primary connector)

Controller

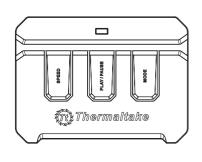

SPEED: Switch over between 2 fan speed modes LED Indicator shows Blue: Normal mode 800~1500rpm LED Indicator shows Red: Low noise mode 400~1000rpm

PLAY/PAUSE: When you switch to 256 colors mode, click to memorize and lock the color you want, click again to unlock the 256 colors auto rotation

MODE: Switch over between 6 LED modes
Red → Blue → White → Green → LED off → 256 colors



